

OPERATING INSTRUCTIONS

UNLOCKING AND LOCKING

To unlock your Securi-Lid lift the dust cover and insert the key into the lock cylinder in the 12 o'clock position and rotate it 90 degrees to the 9 o'clock position.

To lock the Securi-Lid lift the dust cover and insert the key into the lock cylinder in the 9 o'clock position and rotate it 90 degrees to the 12 o'clock position.

OPENING

- To open the Securi-Lid, push on the silver button in the centre of the locking rail and the Securi-Lid will spring open.
- Take hold of the strap attached to the locking rail and allow the roller door to retract in a controlled manner.

CLOSING

- To close the Securi-Lid, stand at the tailgate end and pull the strap towards you until you are able to reach the locking rail.
- Take hold of the handle rail, place strap inside load box and pull gently over the tailgate rail ensuring that the latch engages into the slot on the tailgate rail.

IMPORTANT SAFEGUARDS

- It is recommended to keep your instruction manual in the vehicle to have the unit details and Securi-Lid contact numbers on hand.
- Never force your key left or right in the barrel as it can break off in the key chamber.
- Check that the key slot is in the unlocked position when closing the Securi-Lid to avoid keys being locked inside the load area.
- Keep the dust cover over the lock in the closed position to avoid dirt and dust from getting into the key chamber.
- When releasing the door, ensure you hold onto the strap and allow the door to roll back in a controlled manner.
- The roller door is spring loaded and damage to the roller door can be caused by it rolling back in an uncontrolled manner.
- The Securi-Lid is not 100% waterproof or dustproof. No pressurised seal can be created with any roller door.
- The transporting of sand/dirt in the load bin with the door open or closed is not recommended (See Warranty Obligations).
- It is recommended that the Securi-Lid Cari-On racks are used to carry extra load to avoid damage and scratches on the lid. It is important to check vehicle load specifications before loading on top of the vehicle and/or Cari-on Racks.
- Do not leave small objects on top of the roller door when opening as it may slip into the canister. This may cause the door to jam and become damaged.
- When closing the Securi-Lid, make sure the strap is inside the load box to avoid it getting caught up outside the vehicle.
- Unsuitable chemicals and cleaning detergents are not recommended for cleaning the unit. (See Maintenance and cleaning).
- Styling bars are for decorative purposes only and are not intended to provide safety protection.

MAINTENANCE AND CLEANING

GENERAL CLEANING:

- Do not use thinners, acetone, spirits, petrol or any other abrasive agents to clean your Securi-Lid.
- Car cleaning soap is recommended.
- You may clean with a high pressure cleaner. Do not spray under high impact or at close range.
- During cleaning, water may enter the vehicle due to the high volume of water flow.

SIDE RAILS:

- Keep side rail sections clean of excess dirt and sand by using a rag to wipe the inner section.
- Spray a silicone based lubricant to lubricate rails for smoother action.
- If wear strip is worn, contact your nearest distributor for replacement.

DRAIN PIPES:

Check drain pipes are free of dirt and allow water to flow freely.
To clean follow this procedure:

- Loosen hose clamp on canister.
- Pull pipe off canister.
- Once removed; check that drain channels are clear of any leaves or built up dirt.
- Use high pressure water to flush out drain pipes and the canister fitting.

LOCKING SYSTEM:

- If the latch becomes stuck or stiff, lubricate with a silicone-based spray on the hinge points inside the latch.
- If the push button is stiff, lubricate under the silver button with a silicone-based spray.
- Should you experience any problem with your key, contact your nearest fitment centre right away.

NOTE: DO NOT force the key in any way as this could cause the key to break off in the barrel.

The obligation in terms of this warranty shall be limited to repairing or replacing any part or parts, which in the opinion of Securi-Lid (Pty) Ltd, are defective in materials or workmanship under normal use and service during the warranty period commencing from the original fitment date.



The obligation in terms of this warranty shall be limited to repairing or replacing any part or parts, which in the opinion of Securi-Lid (Pty) Ltd, are defective in materials or workmanship under normal use and service during the warranty period commencing from the original fitment date.

The warranty does not apply if the unit has been subject to negligence, accident, abuse, misuse, improper maintenance, or has been repaired or altered by someone other than Securi-Lid (Pty) Ltd, its authorised agents or approved fitment centres. Negligence includes but is not limited to driving the vehicle on dirt or gravel roads with the Securi-Lid door in the (partially or fully) open position. Warranty will be null and void, should the Securi-Lid be fitted by an unauthorised fitment centre as well as removal and refitment to the same or other vehicle. Obligations extend to Cari-On racks (12-month warranty from date of fitment) fitted to the Securi-Lid. For refitted styling bars, the relevant Securi-Lid bracket sets are to be used (12-month warranty on material and coating of bracket sets only) with obligations as listed above.

An annual service by an authorised fitment centre is recommended.

Any defect must be reported to the regional distributor (listed on the website of Securi-Lid (Pty) Ltd) forthwith, but in any event no later than ten days after the defect arose. The regional distributor will make arrangements for the unit to be inspected. If the inspection reveals that the unit is not defective or the warranty is excluded, you will be liable for the costs of the inspection.

Insofar as the Consumer Protection act 68 of 2008 may be applicable, the provisions of this Act shall prevail over the terms and conditions of this warranty.

WARRANTY

Securi-Lid (Pty) Ltd warrants that the unit operated under normal use will be free from defects in materials and workmanship for a one year period following the original fitment date, subject to the above requirements, exclusions and limitations.